


## Quick Setup

Before using the projector, make sure you read the safety instructions in the online *User's Guide*.

## Connect the projector

Choose from the following connections. See the sections below or the online *User's Guide* for details.

### Computer

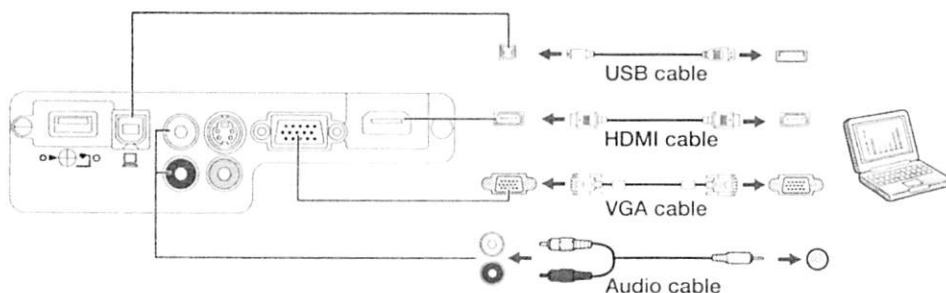

#### USB port


Connect the square end of a USB cable to the projector's **USB-B** (square) port. Connect the flat end of the cable to any USB port on your computer.

**Windows® XP or later:** After turning on the projector, follow the on-screen instructions to install the Epson® USB Display software (**EMP\_UDSE.EXE**; only on first connection). If the software screen does not display automatically, open **My Computer** or **Computer**, then double-click **EPSON\_PJ\_UD**.

**Mac OS X 10.5.8 or higher:** After turning on the projector, the setup folder for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection).

**Note:** If you have problems installing the USB Display software, make sure the **USB Type B** setting in the projector's **Extended** menu is set to **USB Display**. See the online *User's Guide* for instructions.

#### VGA port

Connect one end of a VGA cable to the projector's **Computer** port, and the other end to your computer's  monitor port. If you are using a laptop, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.


#### HDMI port

Connect one end of an HDMI cable to the projector's **HDMI** port and the other end to an HDMI port on your computer.

for USB Display appears in the Finder. Double-click **USB Display Installer** and follow the on-screen instructions to install the Epson USB Display software (only on first connection).

**Note:** If you have problems installing the USB Display software, make sure the **USB Type B** setting in the projector's **Extended** menu is set to **USB Display**. See the online User's Guide for instructions.

### VGA port


Connect one end of a **VGA** cable to the projector's **Computer** port, and the other end to your computer's  monitor port. If you are using a laptop, switch it to external display (see "Troubleshooting"). You can also connect an audio cable.

### HDMI port

Connect one end of an **HDMI** cable to the projector's **HDMI** port and the other end to an **HDMI** port on your computer.

### Video device


Connect up to 4 video devices and use the remote control to switch between them.

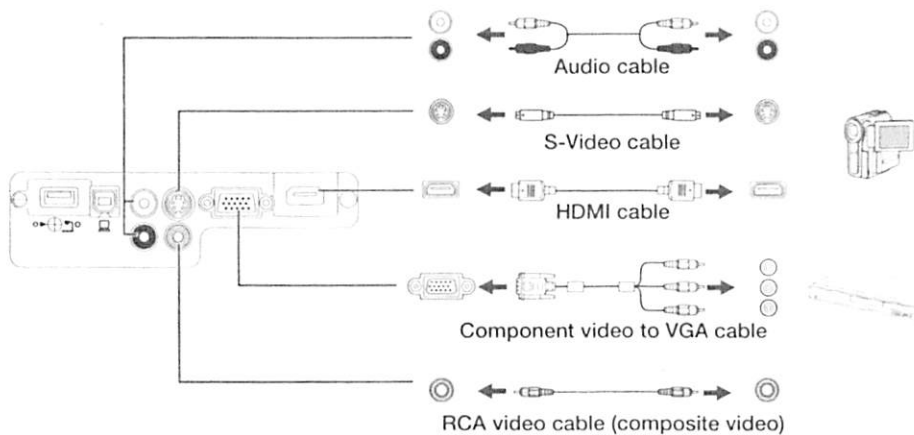

\*412526200\*

## Camera, USB device, or Epson DC-06 document camera


Connect a digital camera, USB flash drive, USB storage device, or Epson DC-06 document camera to the projector's **USB-A** (flat) port.

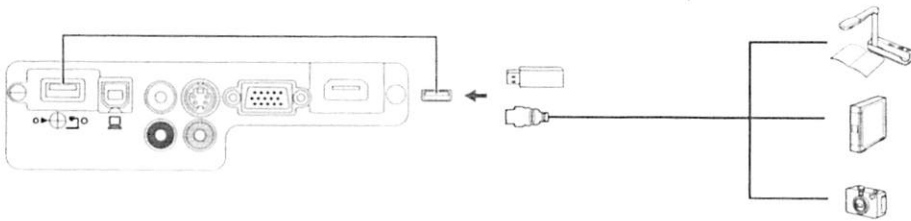


If you connect a digital camera, USB flash drive, or USB storage device, you can use the projector's PC Free feature. See the online *User's Guide* for details.


# Turn on your equipment


**1** Turn on your computer or video source.


**2** Plug in the projector. The  power light on the projector turns blue.

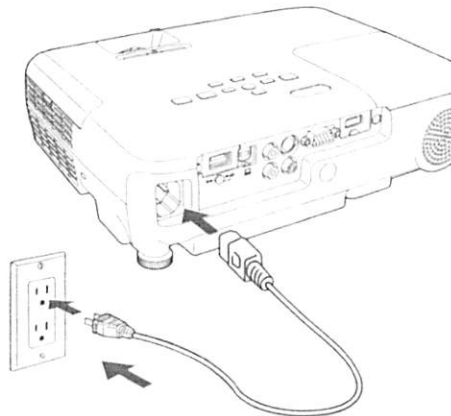


**3** Open the **AV Mute** slide all the way.

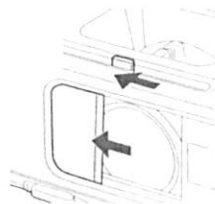


**4** Press the  power button. The projector beeps, the **Status** light flashes blue, and then stays on.

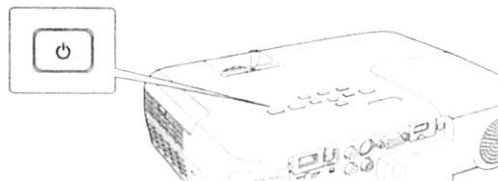


**Note:** To shut down the projector, press the  power button twice, then unplug it. You don't have to wait for the projector to cool down.

**5** The default language of the menu system is **English**. To select another language, press the **Menu** button on the projector. Select **Extended** and press **Enter**. Select **Language** and press **Enter**. Select your language and press **Enter**. Press the **Menu** button to exit the menu system.

- 4 Press the  power button. The projector beeps, the **Status** light flashes blue, and then stays on.



**Note:** To shut down the projector, press the  power button twice, then unplug it. You don't have to wait for the projector to cool down.


- 5 The default language of the menu system is **English**. To select another language, press the **Menu** button on the projector. Select **Extended** and press **Enter**. Select **Language** and press **Enter**. Select your language and press **Enter**. Press the **Menu** button to exit the menu system.

## Adjust the image

- 1 If you don't see an image, press the **Source Search** button on the projector or remote control to select the image source.


**Note:** If you still see a blank screen or have other display problems, see the troubleshooting tips on the back of this sheet.

- 2 To raise the image, press the foot release button and lift the front of the projector. Release the button to lock the foot in position.

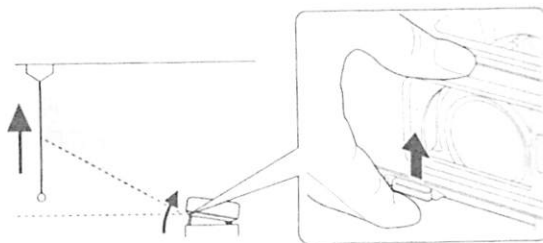




**3 EX5220/EX6220/EX7220:** To reduce or enlarge the image, turn the zoom ring.

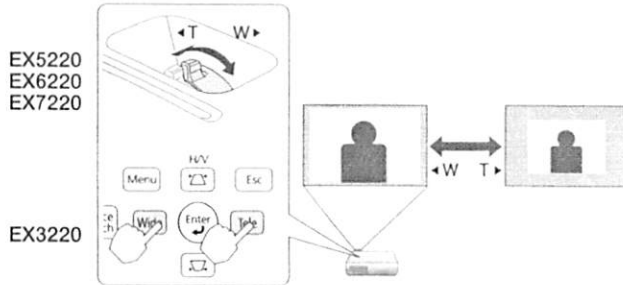
**EX3220:** To reduce or enlarge the image, press the **Tele** (reduce) or **Wide** (enlarge) buttons on the projector.



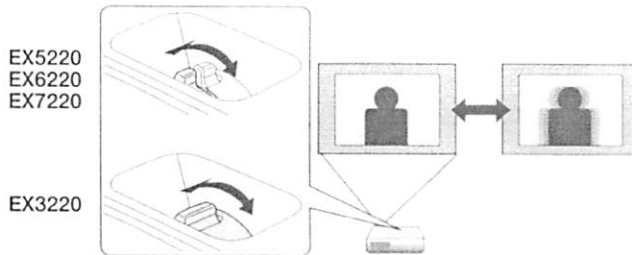



**4** Turn the focus ring to sharpen the image.

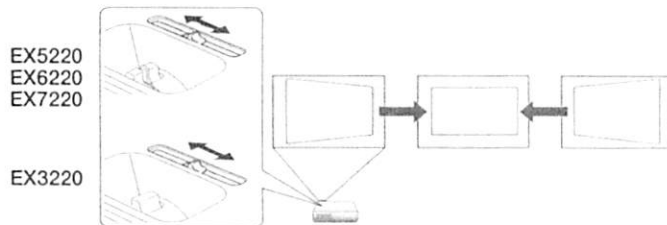

**5** If your image looks like  or , you may have placed the projector off to one side of the screen at an angle. Place the projector directly in front of the center of the screen, facing the screen squarely. If you can't move the projector, use the horizontal slider on the projector to correct the image.



**6** Your projector automatically adjusts images that look like  or , but if necessary you can press the  or  button on the projector to correct it.

## Using the remote control

Make sure the batteries are installed as shown (two AA batteries).

